


## **City of Huntington Beach**

Department of Community Development WATER HEATER INSTALLATIONS

2000 Main Street, Huntington Beach, CA 92648 Office: (714) 536 - 5241 Fax: (714) 374 - 1647

## Typical Installation

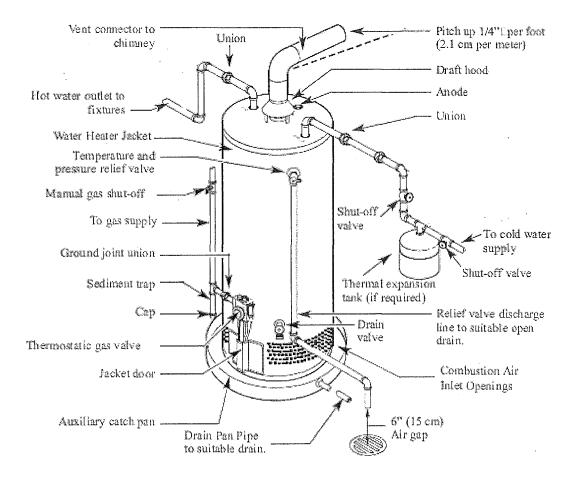

- Water Heater replacements and relocations require a plumbing permit.
- Electric water heater replacements and relocations require separate plumbing <u>and</u> electrical permits.
- All water heaters must be installed with a Combination Temperature and Pressure Relief Safety Valve. The valve must have a full-bore rigid pipe or tube drain that terminates within six (6") to twenty-four (24") inches above finish grade outside of the structure. Outside the structure includes outside the garage if that's where the water heater is located.
- Centrally located water heaters where it is not feasible to extend the Temp. & Press. Safety
  Valve drain to the outside because of structural conditions must incorporate the use of a
  Temperature Safety valve at the water heater location on the gas supply to the water heater.
  In addition a Water Pressure Safety valve <u>must</u> be installed in the cold water piping system
  preferably outdoors, where the discharge of the valve will not cause water damage.



## **City of Huntington Beach**

Department of Community Development WATER HEATER INSTALLATIONS

2000 Main Street, Huntington Beach, CA 92648 Office: (714) 536 - 5241 Fax: (714) 374 - 1647

- Water heaters located in or above an attic, attic/ceiling assembly, floor/ceiling assembly or floor/subfloor assembly <u>must</u> be installed with a watertight, corrosion - proof pan equipped with a 3/4"drain terminating in an approved location. The drain pan drain piping MAY NOT combine with the Temperature and Pressure relief drain and must be run separately to approved locations.
- All gas appliance shut-off valves for water heaters must be accessible and located within 6 feet of the heater but as close as practical, hereby limiting the flexible gas appliance connector to a length of 6 feet but as short as practical. Size of the gas appliance connector must be the same size as the inlet to the gas valve that it supplies.
- All water heaters <u>must</u> have seismic restraints consisting of two (2) straps, one located in the upper one third of the tank and one located in the lower one third of the tank with the lower strap located a minimum of four inches (4") above the gas valve control. Seismic strapping is not shown on diagram.
- This information is for standard electric, gas-fired and direct-vent water heaters. If the information you seek is not found in the guidelines above please call 536-5241 and ask for a Building Inspectors assistance.